



# TUNDRA

## 2 0 1 3



QUICK REFERENCE GUIDE

# 2013 Tundra

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tundra.

## A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Tundra operations. Every Tundra owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1</sup></b>	<b>6</b>
Light control-Instrument panel	6

## FEATURES/OPERATIONS

Accessory meter	25
Air Conditioning/Heating	20-21
Audio	22-23
Automatic Transmission	9
Bottle holders	26
Cruise control	25
Cup holders	27
Door locks	10
Four-wheel drive	10
Garage door opener (HomeLink®) <sup>3</sup>	21
<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>16</b>
Mirrors-Power side view	10
Moonroof	12
<b>Multi-Information Display<sup>2</sup></b>	<b>18</b>
Parking brake	18
Power outlets-12V DC	17
Power outlets-115V AC	17
Rear seat entertainment system	24
Seat adjustments-Front	12-13
Seat adjustments-Rear	13
Seat heaters and ventilators	19
Seats-Folding	14
Seats-Head restraints	14
Telephone controls (Bluetooth®)	26
Tilt and telescopic steering wheel	11
“TOW/HAUL” switch	11
VSC OFF button	24
Window-Rear	19
Windows-Power	19
Windshield wipers & washers	15

## SAFETY AND

## EMERGENCY FEATURES

Doors-Child safety locks	29
Floor mat installation	31
Seat belts	28
Seat belts-Shoulder belt anchor	28
Spare tire & tools	29
Star Safety System™	30-31
Tire Pressure Monitoring (warning) System	28

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

 
 
 
 
<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink® is a registered trademark of Johnson Controls, Inc.


# OVERVIEW

## Instrument panel

### Steering wheel controls (if equipped)

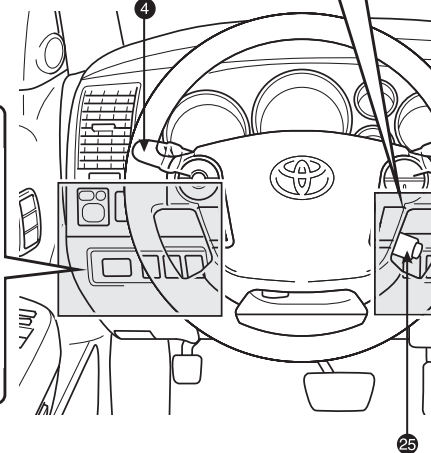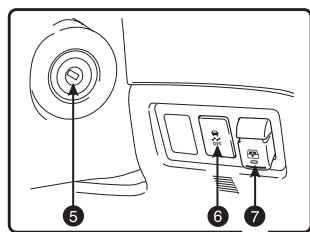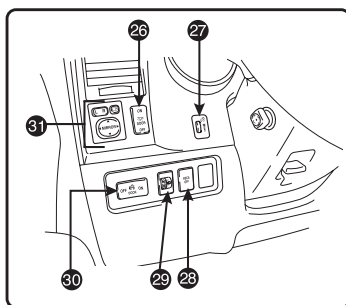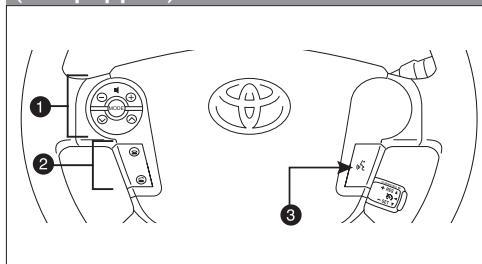

- ❶ Steering wheel audio controls<sup>1</sup>
- ❷ Telephone controls<sup>1</sup>
- ❸ Voice command button<sup>1,2</sup>
- ❹ Headlight, turn signal and front fog light<sup>1</sup> controls
- ❺ Ignition switch
- ❻ VSC OFF button
- ❼ Power back window switch<sup>1</sup>
- ❽ Emergency flasher button
- ❾ Multi-Information Display/Accessory meter control buttons<sup>1</sup>
- ❿ Intuitive parking assist button<sup>1</sup>
- ⓫ Wiper and washer controls
- ⓬ Accessory meter
- ⓭ Theft deterrent/Engine immobilizer system indicator<sup>1</sup>
- ⓮ Audio system or navigation system-integrated audio system<sup>2</sup>
- ⓯ Outside rearview mirror/Back window defogger/Windshield wiper de-icer button<sup>1</sup>
- ⓰ Front passenger seat belt reminder
- ⓱ Front passenger occupant classification indicator or front passenger airbag ON/OFF indicator<sup>1</sup>
- ⓲ Seat heater controls<sup>1</sup>

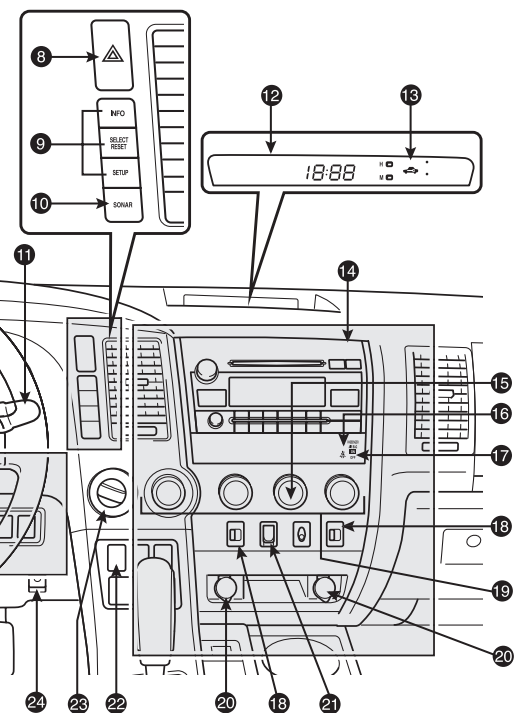 


- 19 Air Conditioning controls
- 20 12V DC Power outlet
- 21 AUX port/USB port<sup>1</sup>
- 22 "TOW/HAUL" button<sup>1</sup>
- 23 Two-wheel/Four-wheel drive selector<sup>1</sup>
- 24 Tire Pressure Monitoring (warning) System reset
- 25 Cruise control<sup>1</sup>
- 26 Interior light/Personal light main switch
- 27 Instrument panel light control
- 28 "RSCA OFF" switch<sup>1</sup>
- 29 Headlight leveling dial<sup>1</sup>
- 30 Cargo lamp switch
- 31 Power rearview mirror controls<sup>1</sup>


<sup>1</sup> If equipped

<sup>2</sup> For vehicles with a navigation system, refer to the "Navigation System Owner's Manual."

### Bench seat with manual Air Conditioning system

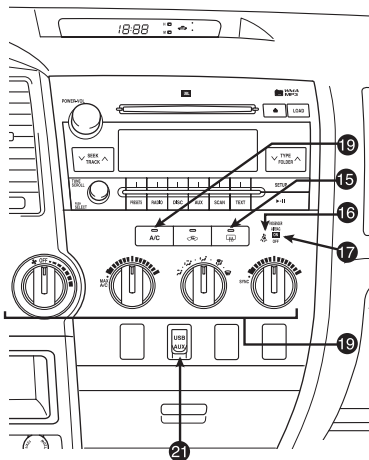 


### Separate seat with manual Air Conditioning system

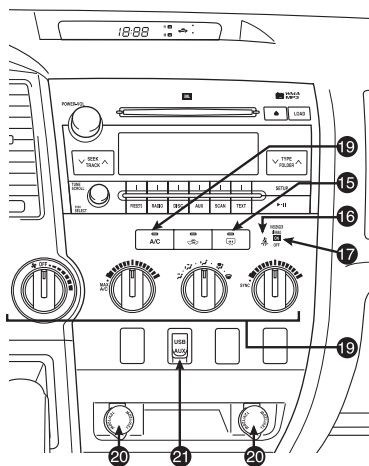 


## Instrument cluster
 
### Without Multi-Information Display

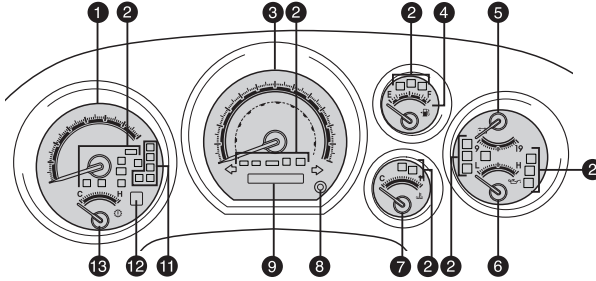

### With Multi-Information Display

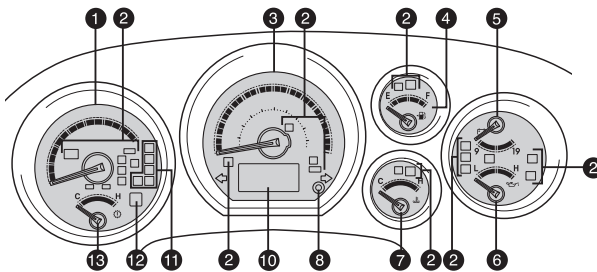 




- ① Tachometer (if equipped)
- ② Service indicator and reminder
- ③ Speedometer
- ④ Fuel gauge
- ⑤ Voltmeter (if equipped)
- ⑥ Oil pressure gauge (if equipped)
- ⑦ Engine coolant temperature
- ⑧ Trip meter reset knob
- ⑨ Odometer and two trip meters
- ⑩ Multi-Information Display
- ⑪ Automatic Transmission shift position indicator
- ⑫ Automatic Transmission shift range display
- ⑬ Automatic Transmission fluid temperature gauge (if equipped)


## Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2013 *Owner’s Manual*.

**BRAKE** Brake system warning<sup>1</sup>

  Driver/Front passenger seat belt reminder  
(alarm will sound if speed is over 12 mph)

 Charging system warning<sup>1</sup>

 Front passenger occupant classification or front passenger airbag ON/OFF indicator

	Low engine oil pressure warning <sup>1</sup>
	Malfunction/Check Engine indicator <sup>1</sup>
	Engine oil replacement reminder <sup>1</sup>
	Low fuel level warning
	Open door warning
	Airbag SRS warning <sup>1</sup>
	Master warning
	Automatic Transmission fluid temperature warning <sup>1</sup>
	Low Tire Pressure Warning <sup>1</sup>
	Low windshield washer fluid level warning <sup>1</sup>
	Theft deterrent/Engine immobilizer system indicator
	Roll Sensing Curtain Airbags OFF indicator <sup>1</sup>
	Headlight low/high beam indicator
	Turn signal indicator
	High/Low speed four-wheel drive indicator
	Slip indicator <sup>1</sup>
	Vehicle Stability Control OFF indicator <sup>1</sup>
	TOW/HAUL mode indicator <sup>1</sup>
	AUTO Limited Slip Differential indicator <sup>1</sup>
	Cruise control indicator
	Anti-lock Brake System warning <sup>1</sup>
	Power steering warning light <sup>1</sup>
	Traction Control OFF indicator

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

 
Keyless entry (if equipped)


Locking operation



Push 

Unlocking operation

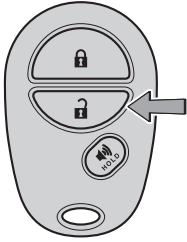

Push ONCE: Driver door  
TWICE: All doors 

 
**NOTE:** If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


Panic button



Push and hold 


Light control-Instrument panel

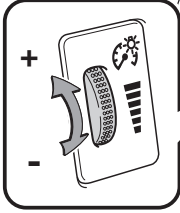Brightness control 

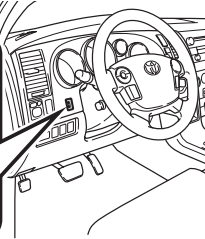 




## Fuel tank door release and cap

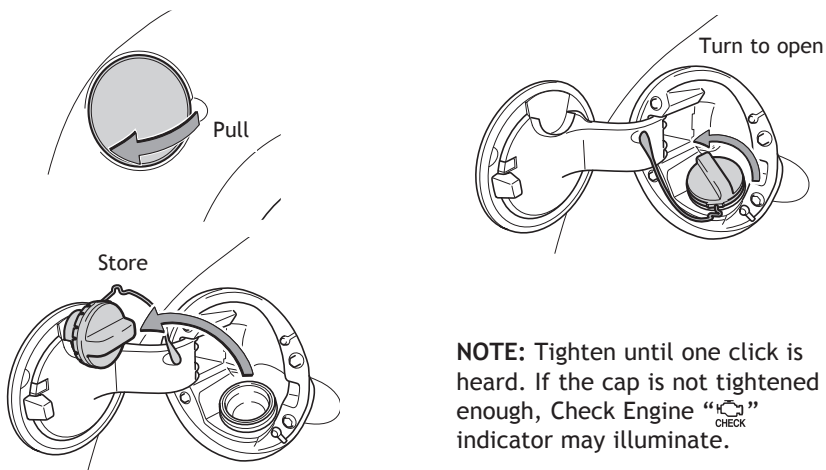 


## Hood release

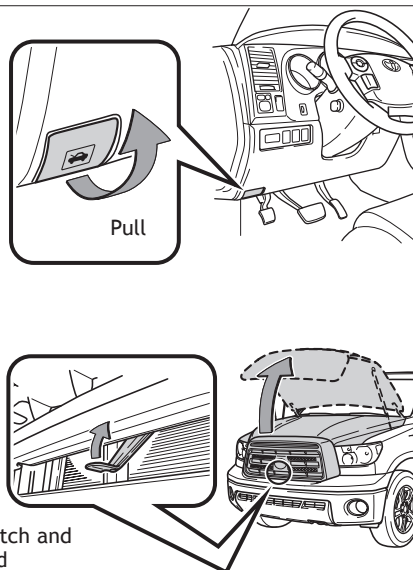 


## Engine maintenance
 
### 4.0L 6 cylinder (1GR-FE) engine

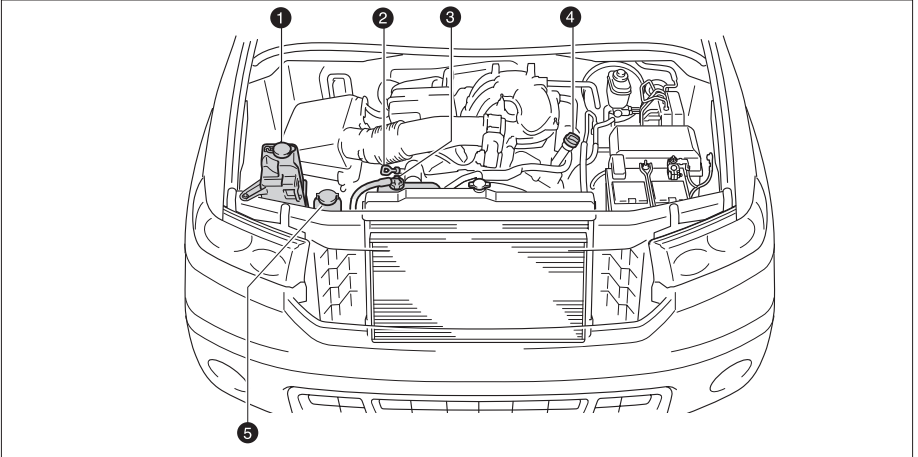

### 4.6L 8 cylinder (1UR-FE) and 5.7L 8 cylinder (3UR-FE/3UR-FBE) engines

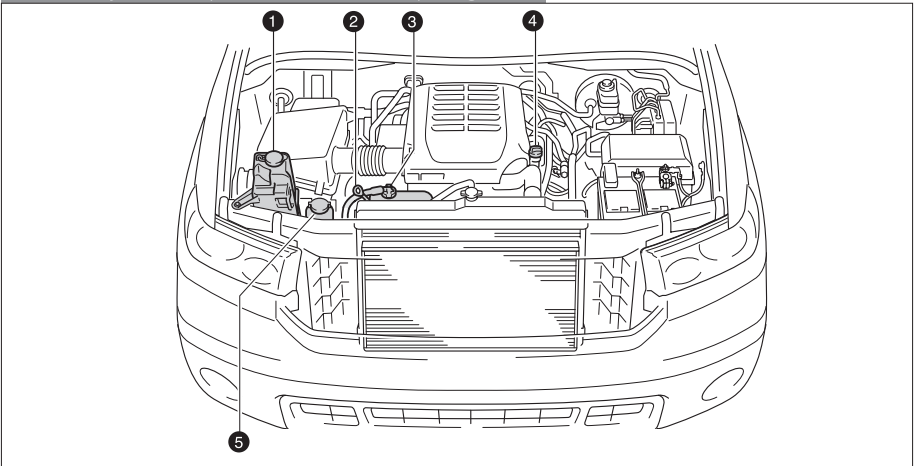 


- ❶ Windshield washer fluid tank
- ❷ Engine oil level dipstick
- ❸ Engine coolant reservoir
- ❹ Engine oil filler cap
- ❺ Power steering fluid reservoir

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”


# FEATURES/OPERATIONS
 
## Automatic Transmission

### Floor shift type

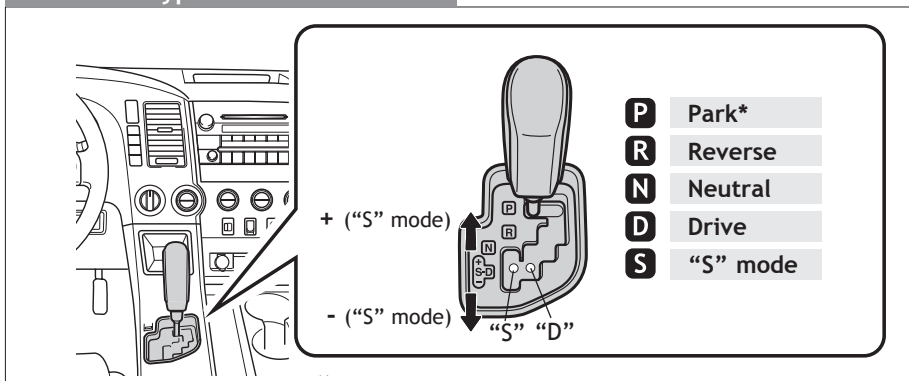

### Column shift type

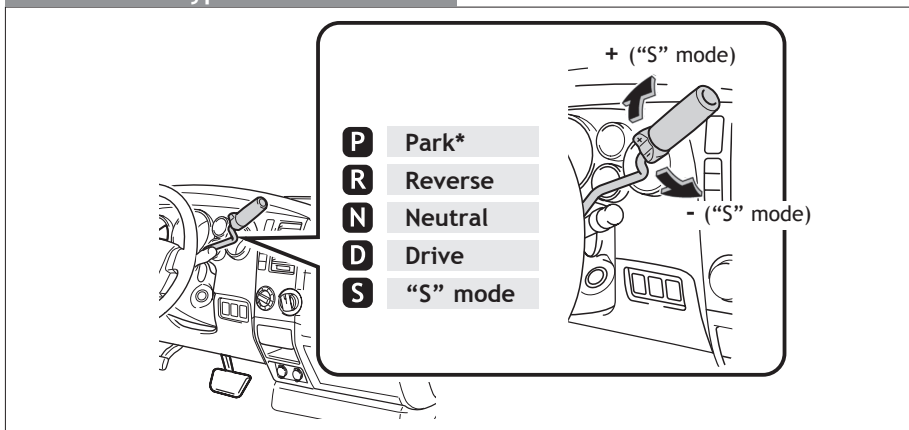 

\* The ignition switch must be set at "ON" and the brake pedal depressed to shift from Park.

### "S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

#### Floor shift type:

 
- +: Upshift (push and release)
- : Downshift (pull and release)

#### Column shift type:

- +: Upshift (push and release)
- : Downshift (push and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Four-wheel drive (if equipped)

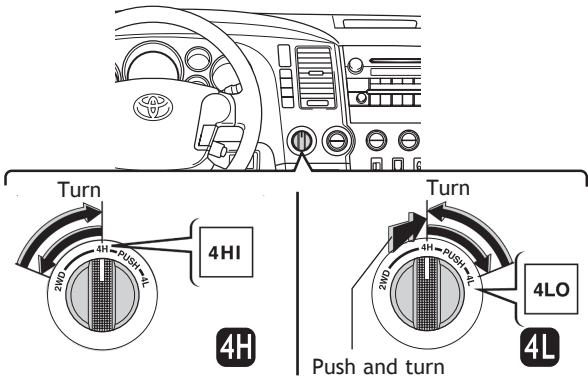

- 2WD** High speed (2WD)  
Turn to “2WD” from “4H” with speed below 62 mph.
- 4H** High speed (4WD)  
Turn to “4H” from “2WD” with speed below 62 mph.  
Shift to “N” position when stopped, then turn to “4H” from “4L.”
- 4L** Low speed (4WD)  
Shift to “N” position when stopped, then turn to “4L” from “4H.”


For best fuel economy and performance under normal driving conditions, keep in “2WD” position.

 Mirrors-Power side view (if equipped)

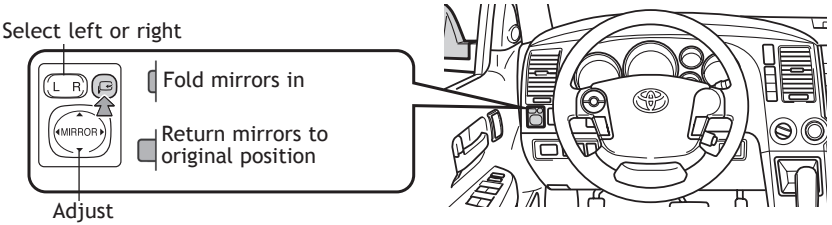

Key must be in the “ACC” or “ON” position.

 
Door locks (if equipped)

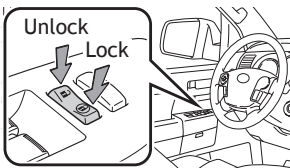


## Tilt and telescopic (if equipped) steering wheel

### Manual
 
#### Tilt steering wheel

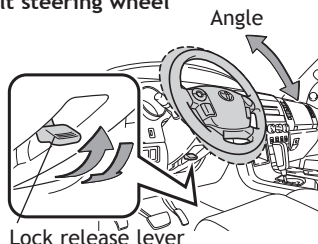


#### Tilt and telescopic steering wheel

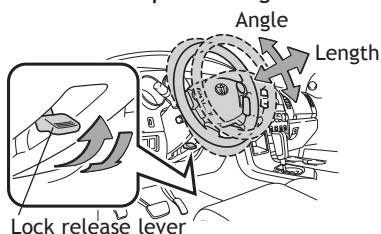 

Hold wheel, push lever down, set angle and length, and return lever.

### Power

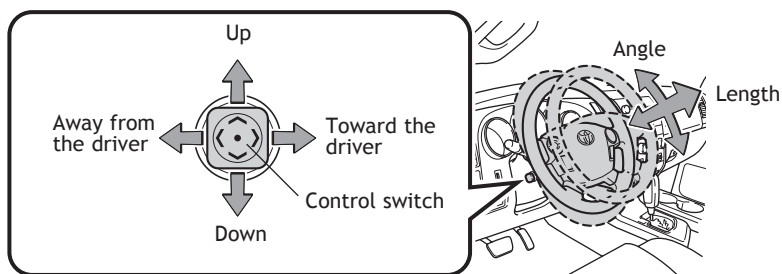 


Push the control switch, set angle and length.


**NOTE:** Do not attempt to adjust while the vehicle is in motion.

## “TOW/HAUL” switch (if equipped)
 
#### Floor shift type

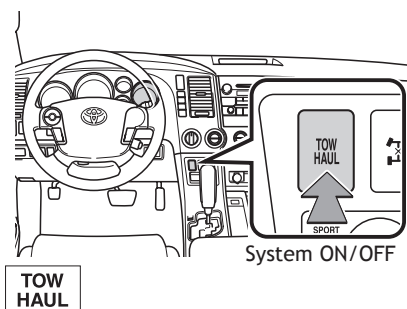

#### Column shift type

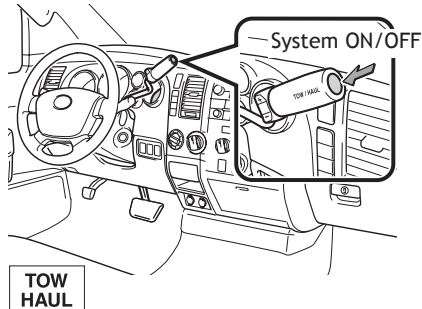 


“TOW/HAUL” mode can be used when carrying heavy loads. As fuel economy is reduced while in “TOW/HAUL” mode, deactivating when driving without a load is recommended.


Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Moonroof (if equipped)

 Sliding operation

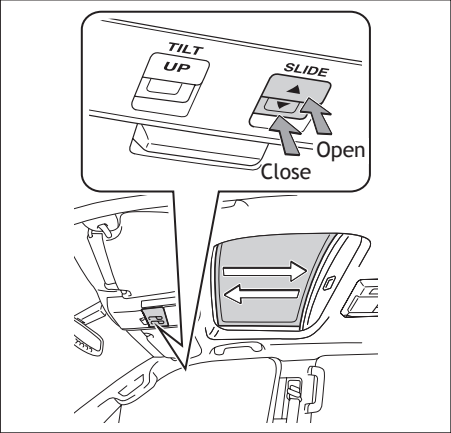

Tilting operation

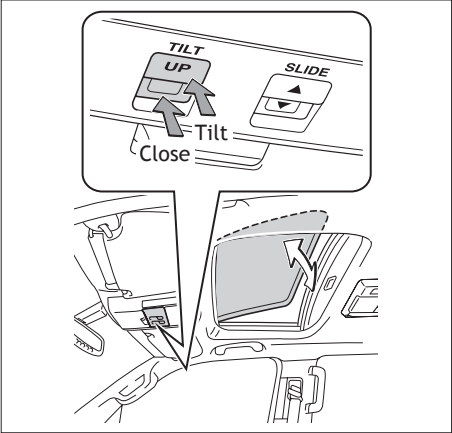 


Push once to open/close completely. To stop partway, press the switch lightly.


Seat adjustments-Front

Manual seat

 
Separate seat  
-Regular cab model

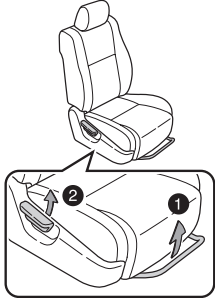

 Separate seat  
-Double cab and CrewMax models

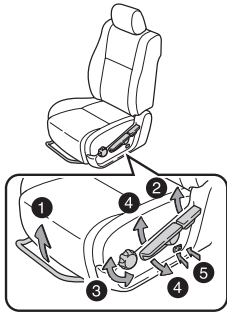


Bench seat

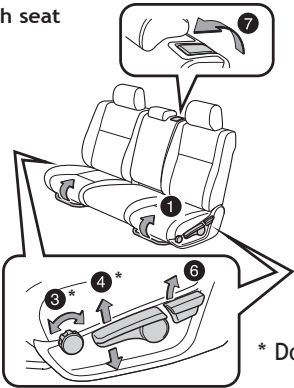 

\* Double cab and CrewMax models only

## Power seat

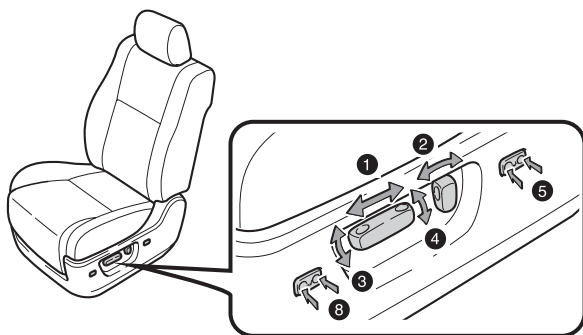 

- ❶ Seat position (forward/backward)
- ❷ Seatback angle
- ❸ Seat cushion angle
- ❹ Seat height
- ❺ Lumbar support (if equipped)
- ❻ Seatback angle (side)
- ❼ Seatback angle (center)
- ❽ Leg support (if equipped)


## Seat adjustments-Rear (CrewMax models)



 - ❶ Seat position (forward/backward)
- ❷ Seatback angle and fold

Seats-Head restraints

**Front-Separate seat**

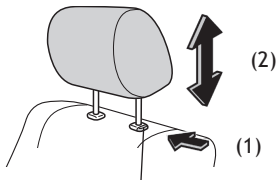


(2)

(1)


Lock release button

**Front-Bench seat**

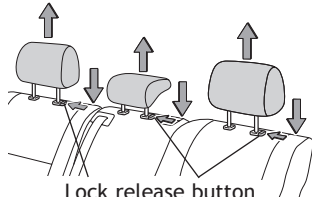 


Lock release button

**Rear (CrewMax model)**

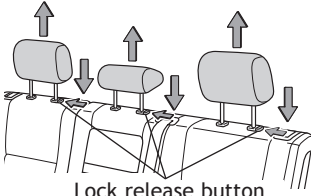 

Lock release button


**Rear (double cab model)**

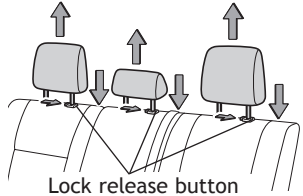 

Lock release button

Seats-Folding

 
Front (regular cab model)

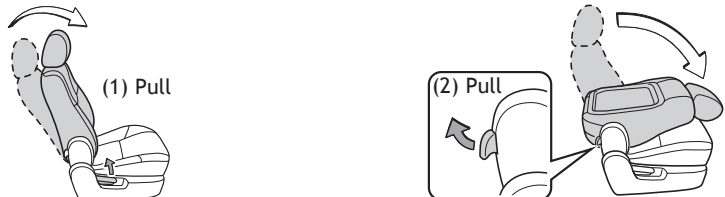

(1) Pull

(2) Pull

 Rear (double cab model)

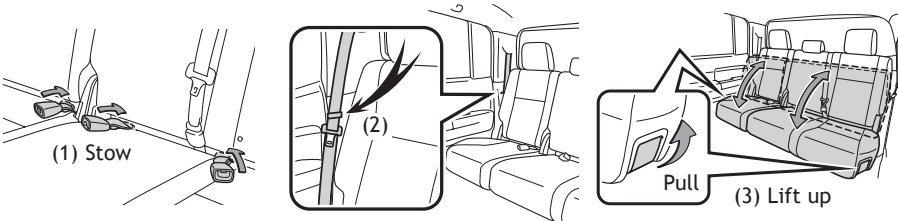


(1) Stow

(2)

Pull

(3) Lift up

 Rear (CrewMax model)

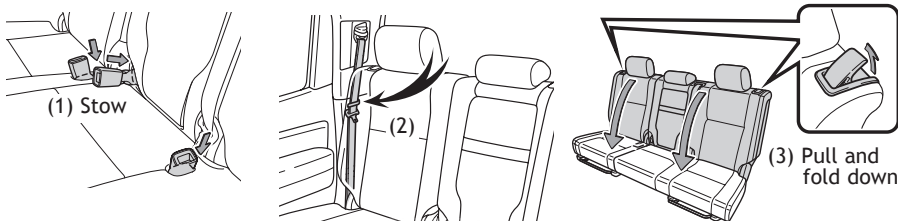

(1) Stow

(2)


(3) Pull and fold down




## Windshield wipers & washers
 
### With intermittent wiper

#### Type A

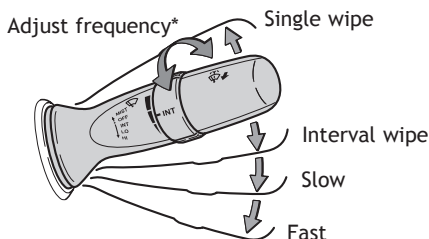


#### Type B

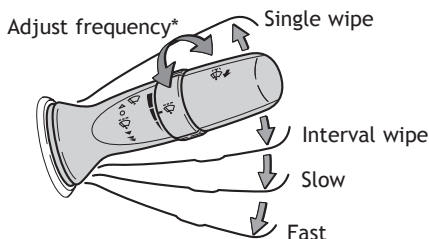 


**\* Intermittent windshield wiper frequency adjustment**  
Rotate to increase/decrease wipe frequency.

### Without intermittent wiper
 
#### Type A

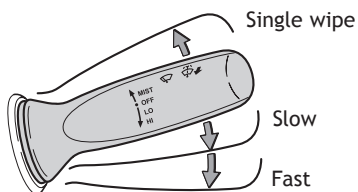


#### Type B

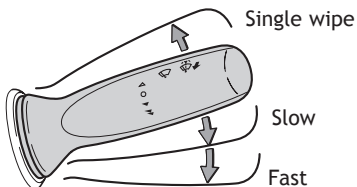 


Lights & turn signals

Headlights

 
Type A

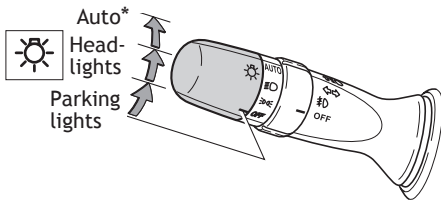

Type B

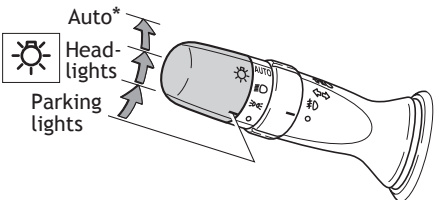 


\* If equipped

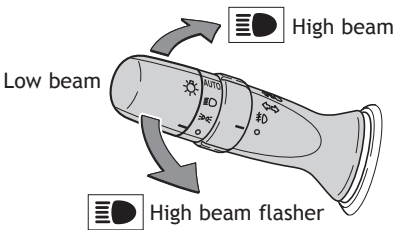 


- Daytime Running Light system (DRL) Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.
- Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

Front fog lights (if equipped)

 Type A

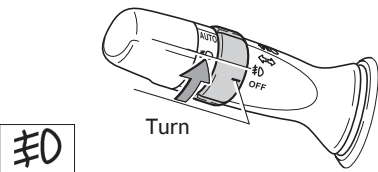


Type B

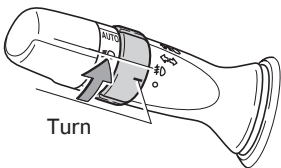 

Front fog lights come on only when the headlights are on low beam.

 
Turn signals

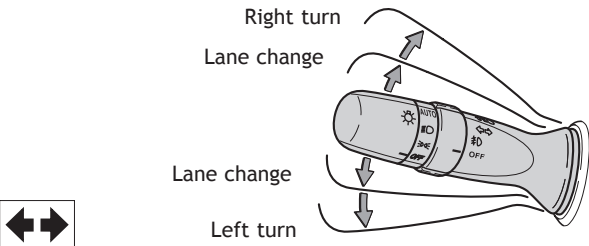


## Power outlets-12V DC (if equipped)

### Separate seats

 
Instrument panel

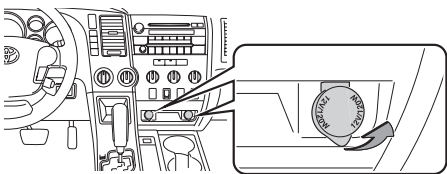


Inside of the center console box

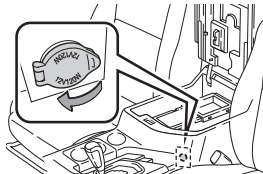 

Back of the center console box

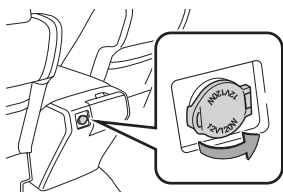 


 Back of the center console box (CrewMax model)

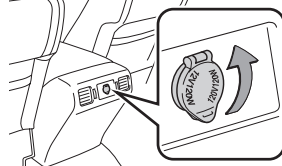


### Bench seat

 
Instrument panel

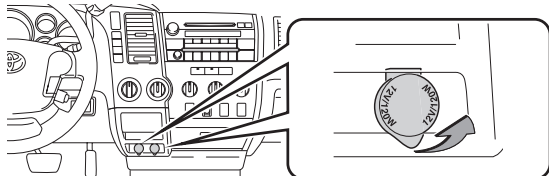

Back of the front center seat

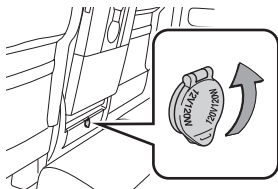 

 
Back of the front center seat (CrewMax model)

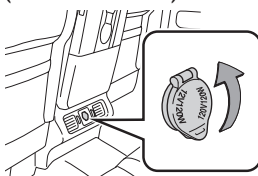


Key must be in the “ACC” or “ON” position to use.

## Power outlets-115V AC (if equipped)

 Back of the center console box

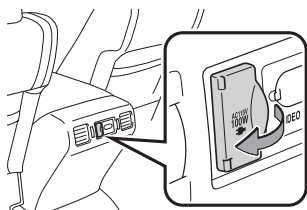


Back of the front center seat

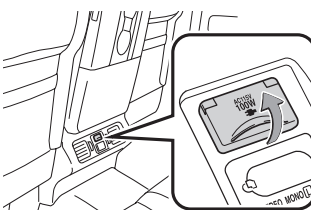 

Key must be in the “ON” position to use.

### Multi-Information Display (if equipped)

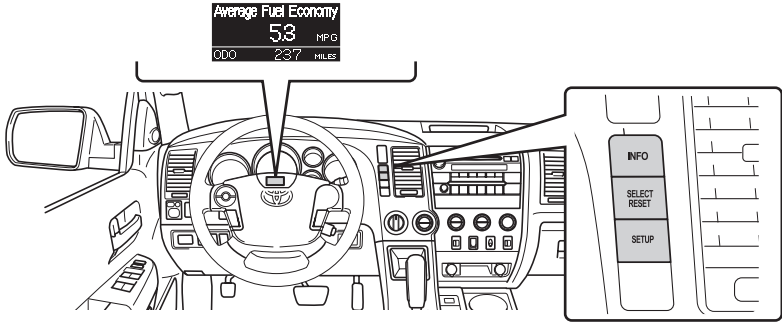 


Push “INFO” to change information in the following:

- (1) Zoom display of odometer and trip meter
- (2) Average gas mileage
- (3) Current gas mileage
- (4) Miles left on remaining fuel
- (5) Running time from engine start
- (6) Average vehicle speed

Push “SETUP” to customize to the following settings:

- (1) UNIT
- (2) KEYLESS ENTRY FEEDBACK
- (3) KEYLESS ENTRY RELOCK TIMER
- (4) KEYLESS ENTRY ALL DOORS UNLOCK
- (5) DOOR AUTO LOCKING
- (6) DOOR AUTO UNLOCKING
- (7) HEADLAMPS AUTO OFF TIMER
- (8) COURTESY LAMPS OFF TIMER
- (9) LANGUAGE
- (10) DEFAULT SETTING

### Parking brake

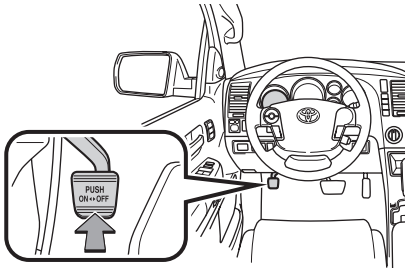 


**BRAKE**


Set: Depress  
Release: Depress again

## Windows-Power (if equipped)
 
### Driver side

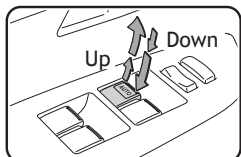

### Window lock switch

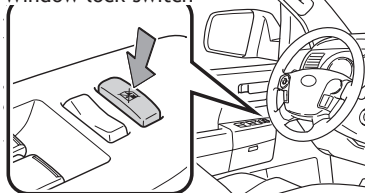 

**Automatic operation (passenger side for some models and driver side)** Push the switch completely down or pull it completely up and release to fully open or close.\* To stop window partway, lightly push the switch in the opposite direction.


**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

\* Not all models are equipped with one-touch close function.

## Window-Rear (if equipped)

 
### Double cab model

### CrewMax model

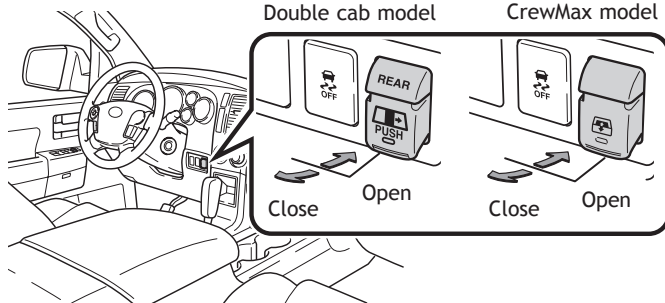


## Seat heaters and ventilators (if equipped)
 
### Driver seat

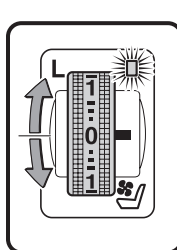


### Front passenger seat

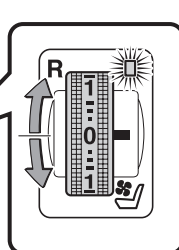 


## Air Conditioning/Heating
 
### Automatic Air Conditioning

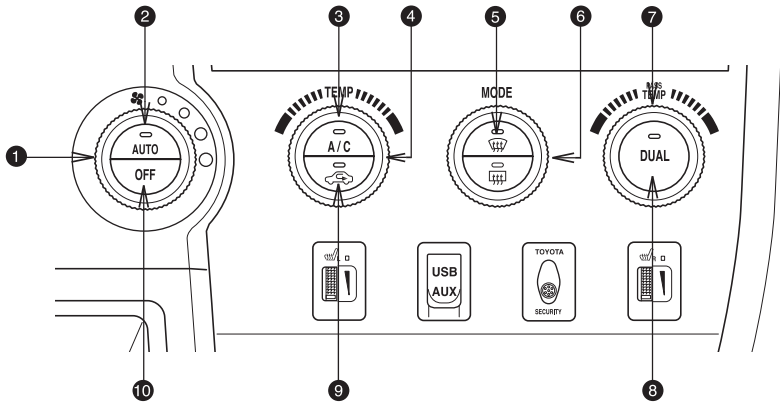


- ❶ Fan speed
- ❷ Automatic climate control ON  
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ❸ Air Conditioning ON/OFF
- ❹ Temperature selector (driver side)
- ❺ Windshield defogger (fresh air only)
- ❻ Airflow vent  
In "❹" mode, use fresh air ("❹" indicator "OFF") to reduce window fogging.
- ❼ Temperature selector (front passenger side)
- ❽ "DUAL" button  
**Indicator ON:** Separate temperature settings for driver and passenger.  
**Indicator OFF:** Synchronize temperature settings for driver and passenger.
- ❾ Recirculate cabin air (fresh air when OFF)
- ❿ Climate control OFF

## Manual Air Conditioning

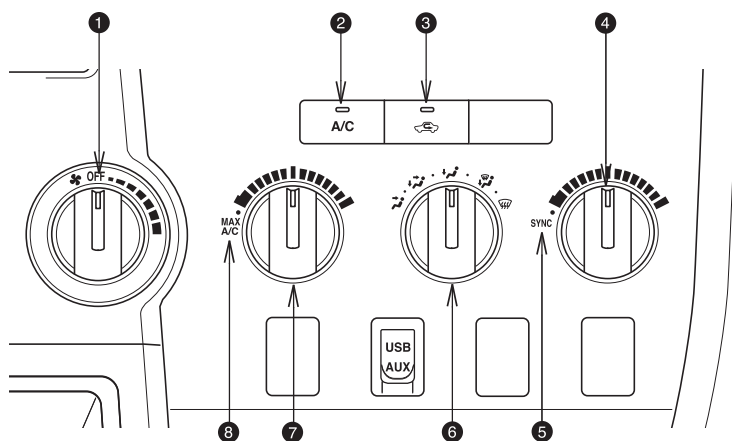 

- ① Fan speed
- ② Air Conditioning ON/OFF
- ③ Recirculate cabin air (fresh air when OFF)
- ④ Temperature selector (front passenger side)
- ⑤ Synchronize with driver side temperature setting
- ⑥ Airflow vent selector  
In “” or “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
- ⑦ Temperature selector (driver side)
- ⑧ Select for maximum cooling. Air intake will automatically be set to recirculate.

## Garage door opener (HomeLink®)\* (if equipped)

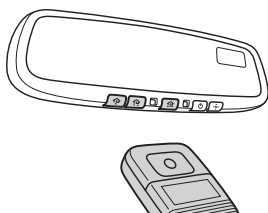 

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 3-8 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


\* HomeLink® is a registered trademark of Johnson Controls, Inc.

Audio

 
Type 1

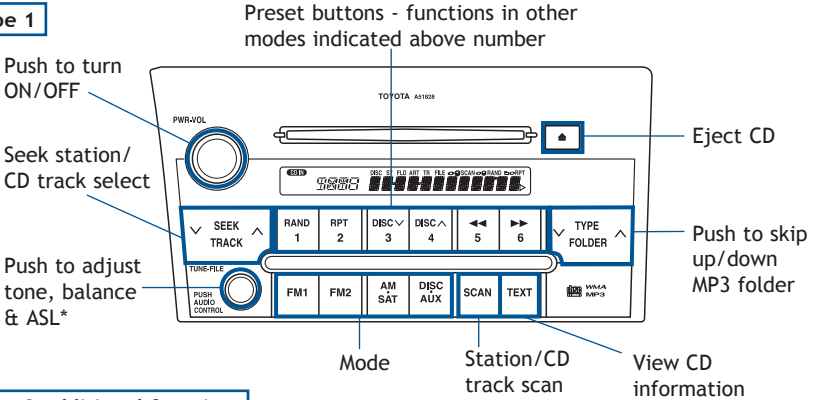

Type 2 additional functions

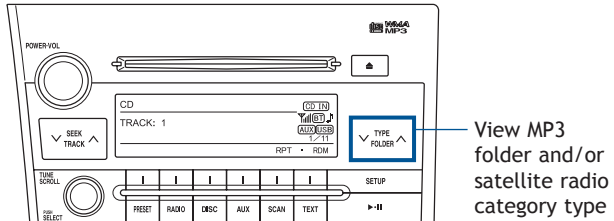 

Type 3 (with JBL speakers)

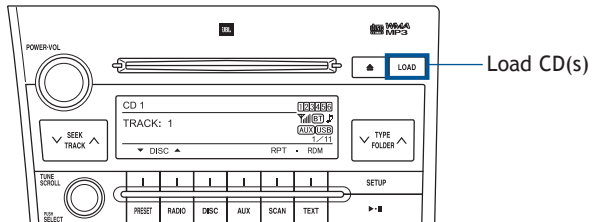 

\* Automatic Sound Leveling

CD player

To scan tracks on a disc Push and hold “SCAN.” Push again to hold selection.  
CD changer (Type 3 only)

-To load one disc Push “LOAD” and insert one disc.



-To load multiple discs Push and hold “LOAD” until you hear a beep.  
Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn “TUNE·FILE” or “TUNE SCROLL.”

To select a folder (MP3/WMA only) Push either side of “TYPE FOLDER.”




## Radio

 **To preset stations** Tune in the desired station and hold down a preset button (1-6 or one of ) until you hear a beep. Push desired preset button (1-6 or one of ) to select.

**To scan stations** Push and hold “SCAN” to scan preset stations. Push again to hold selection.

## Steering wheel switches (if equipped)

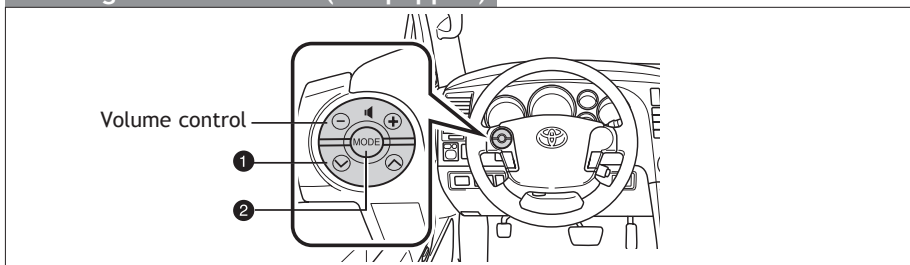


### ① “V A”

Use to search within the selected audio medium (radio, CD, iPod®, etc.).

### ② “MODE”

Push to turn audio ON and select an audio mode. Push and hold to turn audio system OFF.
 
## USB port (if equipped)/AUX port

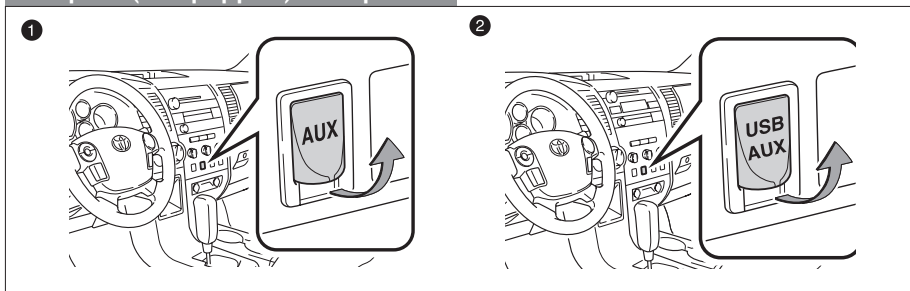


### ① AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

### ② USB port


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system while in USB mode.

 Rear seat entertainment system  
(if equipped)

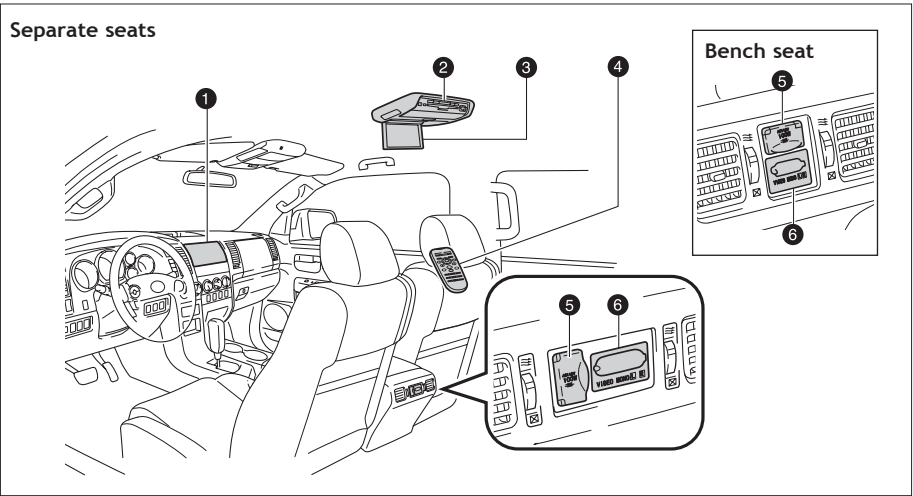

- ① Front audio system
- ② DVD player
- ③ DVD screen
- ④ Remote control
- ⑤ Power outlet
- ⑥ A/V input port

 
VSC OFF button

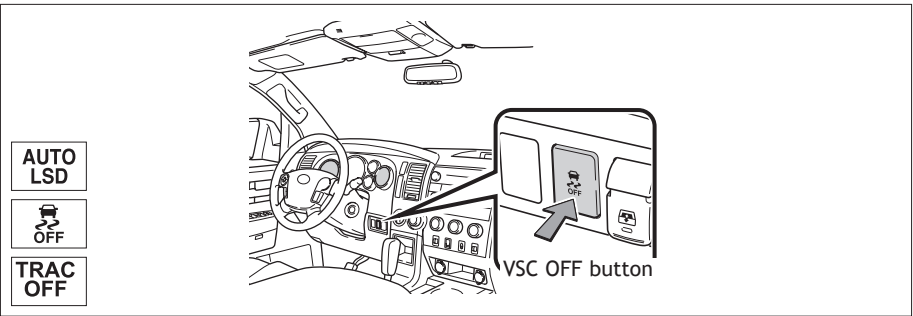

The VSC OFF button is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.

## Accessory meter

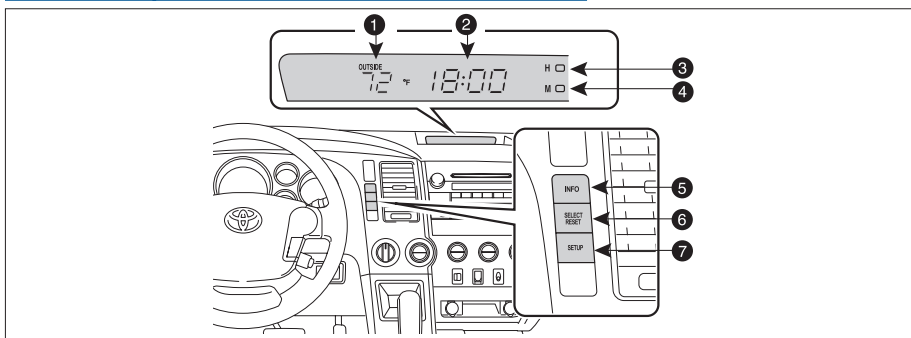 


- ❶ Outside temperature/Cruise information display (if equipped)
- ❷ Clock
- ❸ Hour set
- ❹ Minute set
- ❺ Change information (if equipped)
- ❻ “SELECT RESET” button (if equipped)
- ❼ “SETUP” button (if equipped) to customize unit


Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

## Cruise control (if equipped)
 
### Turning system ON/OFF

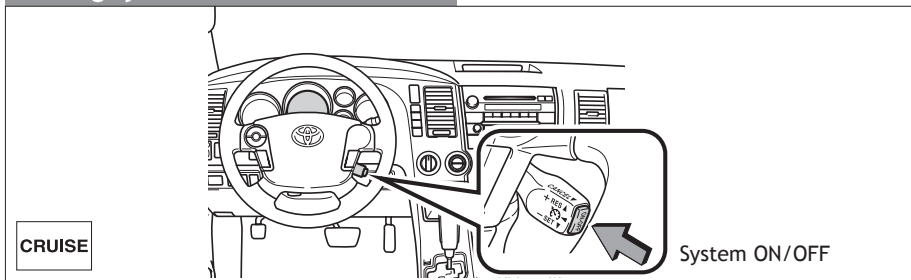

### Functions

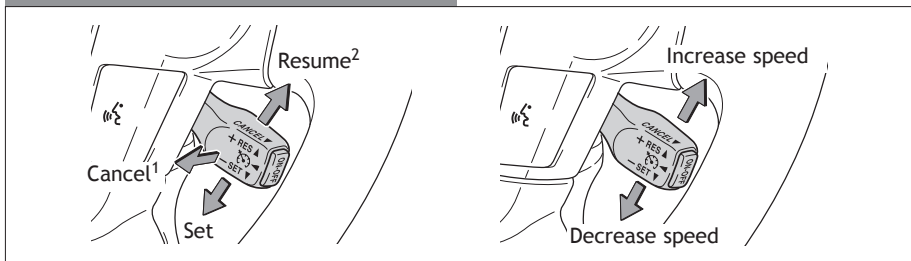 


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.


<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

**Telephone controls (Bluetooth®  
(if equipped))**


**Audio unit**

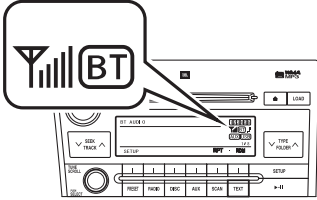 


**Steering wheel telephone switches**

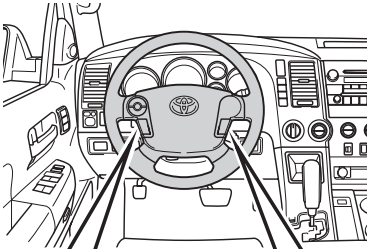 


**Microphone**

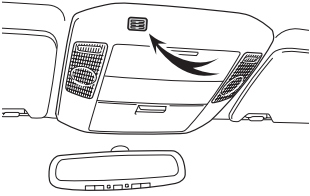 

**Volume**

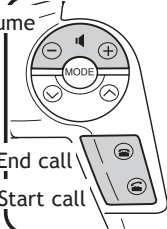 


**Voice command button**




Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system. Refer to “Using the hands-free telephone system,” Section 3-5 in the *Owner’s Manual*, for more details.

**Bottle holders**

 
**Instrument panel (front bench type seat)**

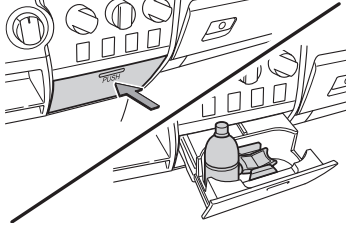


**Front door**

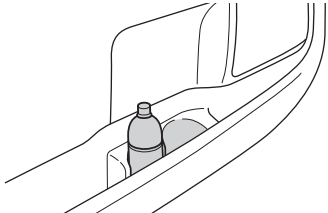 

**Rear door (type A)**

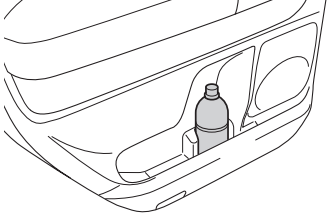 


**Rear door (type B)**

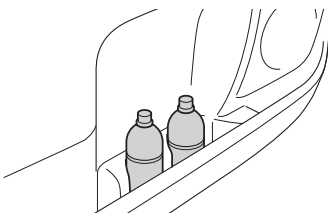 


## Cup holders

### Separate seat
 
#### Center console


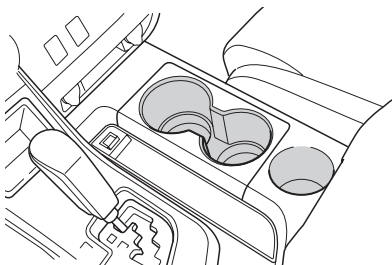


#### Back of the center console box (double cab model)

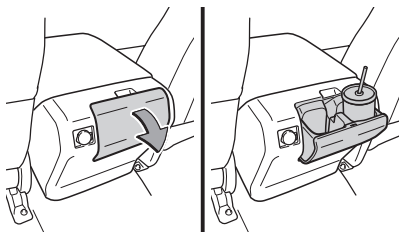 


### Bench seat
  
#### Front center seat

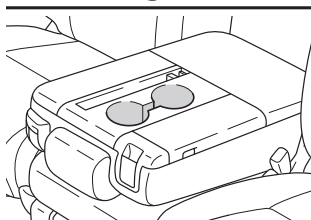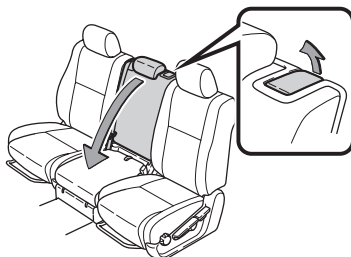


#### Back of the front center seatback (double cab model)

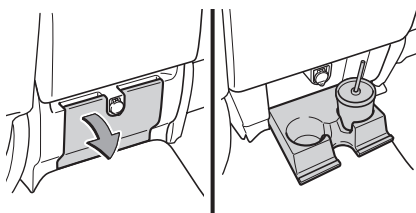 

### Rear seat
 
#### CrewMax model

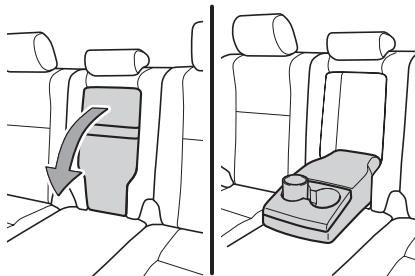

# SAFETY AND EMERGENCY FEATURES

 
## Seat belts




If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Seat belts-Shoulder belt anchor (CrewMax and double cab models)

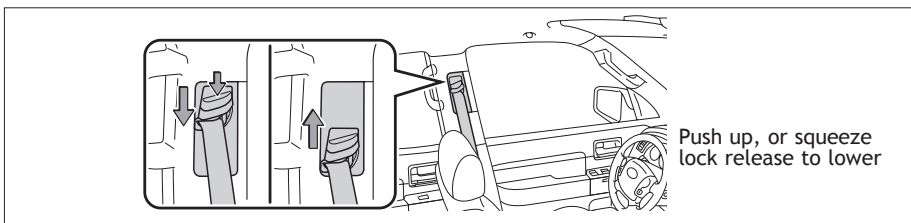

## Tire Pressure Monitoring (warning) System

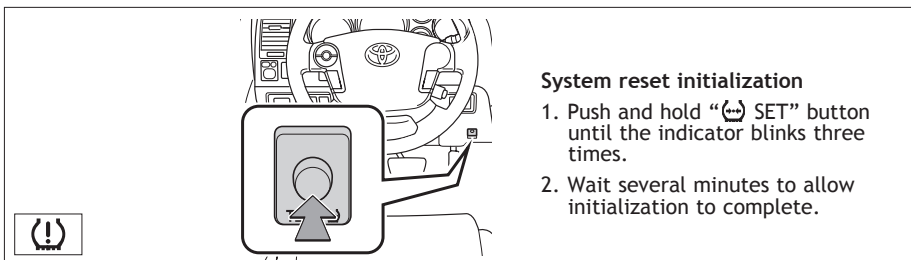 

### System reset initialization

1. Push and hold “SET” button until the indicator blinks three times.
2. Wait several minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

 
Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

**NOTE:** The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

## Doors-Child safety locks (CrewMax and double cab models)

Rear door

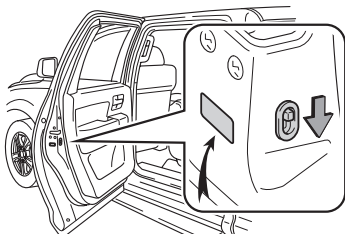


Moving the lever to “LOCK” will allow the door to be opened only from the outside.


## Spare tire & tools
 
### Tool location


**Regular cab models**  
-behind the right seatback

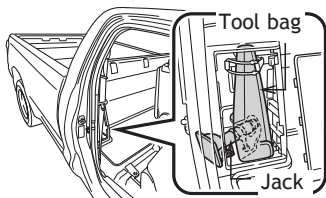

 
**CrewMax models**  
-behind the right rear seatback

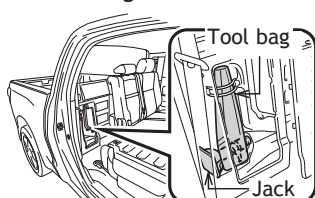

 **Double cab models**  
-under the right rear seats  
without storage box

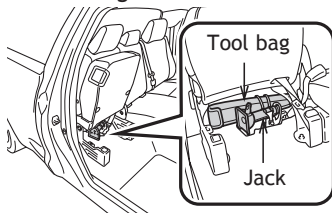


 **Double cab models**  
-under the right rear seats  
with storage box

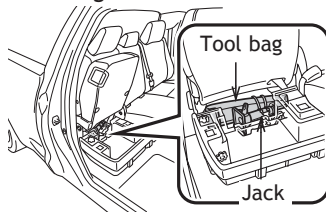


### Removing the spare tire

 (1)

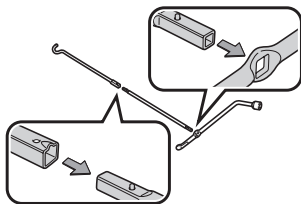

 (2)

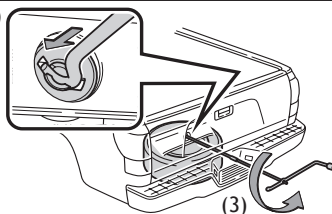

(3)

- (1) Assemble the jack handle.
- (2) Insert the jack handle end into the lowering screw.
- (3) Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

## SAFETY AND EMERGENCY FEATURES

### Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

#### Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

#### Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

#### Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

#### Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

#### Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.



## Smart Stop Technology (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

 
SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

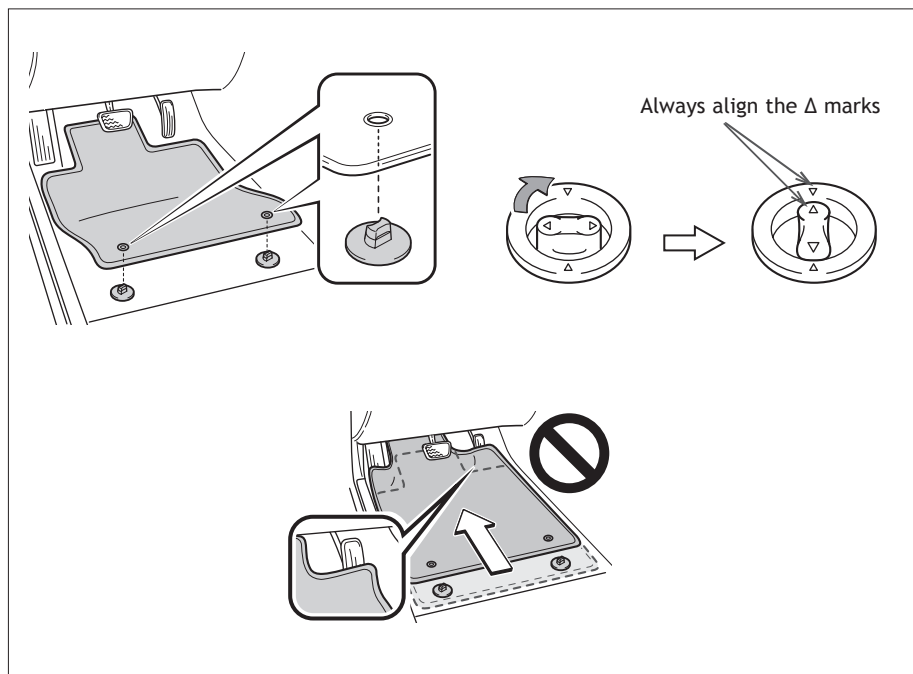







# TOYOTA Owners

[toyota.com/owners](http://toyota.com/owners)

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

